

## HOW TO DIAL A SATELLITE PHONE

Satellite phone numbers are different from land and cellular systems. Each satellite provider has a unique prefix followed by an eight or nine digit number. For Iridium, the number would begin with 8816 followed by eight digit phone number, Inmarsat begins with 870 followed by nine digit phone number, and Thuraya begins with 882 16 followed by an eight digit number. In addition to the prefix and phone number, callers must know and use international dialing codes.

To call out from an Iridium, Inmarsat, or Thuraya satellite phone, the caller needs a clear view of the sky and the phone should be registered to the satellite network. When the phone is ready to dial enter 00 plus the country code and phone number:

For Example: 001 954 973 3100.

To call an Iridium, Inmarsat, or Thuraya satellite phone, the caller needs to enter the international dialing code (i.e. In United States use 011, In Europe use 00, Etc\*) and satellite phone number:

Calling from US to an Iridium phone: 011 8816 31049999

Calling from US to an Inmarsat Phone: 011 870 310499999

Calling from US to a Thuraya Phone: 011 882 16 31049999

\* Each country has a different country code, here is a partial list for additional information on a specific country code visit

<http://www.howtocallabroad.com/codes.html>

Country	Country Code	Exit Code
Afghanistan	93	0
Albania	355	0
Algeria	213	0
Argentina	54	0
Australia	61	11
Austria	43	0
Bahamas	1	11
Bahrain	973	0
Bangladesh	880	0
Bolivia	591	0
Bosnia and Herzegovina	387	0
Botswana	267	0
Brazil	55	0014 - Brasil Telecom 0015 - Telefonica 0021 - Embratel

		0023 - Intelig 0031 - Telmar
British Virgin Islands	1	11
Brunei	673	0
Bulgaria	359	0
Canada	1	11
Cape Verde	238	0
Cayman Islands	1	11
Central African Republic	236	0
Chile	56	1230 - Entel 1200 - Globus 1220 - Manquehue 1810 - Movistar 1690 - Netline 1710 - Telmex
China	86	0
Colombia	57	005 - UNE EPM 007 - ETB 009 - Movistar 00414 - Tigo 00468 - Avantel 00456 - Claro Fixed 00444 - Claro Mobile
Croatia	385	0
Cuba	53	119
Czech Republic	420	0
Djibouti	253	0
Dominican Republic	1	11
Egypt	20	0
El Salvador	503	0
Falkland (Malvinas) Islands	500	0
Finland	358	00, 990, 994, 999
France	33	0
Germany	49	0
Greece	30	0
Guatemala	502	0
Honduras	504	0
Hong Kong	852	1
Hungary	36	0
Iceland	354	0
India	91	0
Indonesia	62	001, 008 - Indosat 007 - Telkom 009 - Bakrie Telecom
Inmarsat Satellite	870	0

Iran	98	0
Iraq	964	0
Ireland	353	0
Iridium Satellite	8816/8817	0
Israel	972	00, 012, 013, 014, 018
Italy	39	0
Jamaica	1	11
Japan	81	10
Jordan	962	0
Kenya	254	000 (006 and 007 to Uganda and Tanzania)
Kuwait	965	0
Kyrgyzstan	996	0
Latvia	371	0
Lebanon	961	0
Liberia	231	0
Lithuania	370	0
Luxembourg	352	0
Malaysia	60	0
Mexico	52	0
Morocco	212	0
Myanmar	95	0
Netherlands	31	0
New Zealand	64	0
Norway	47	0
Pakistan	92	0
Panama	507	0
Peru	51	0
Philippines	63	0
Poland	48	0
Portugal	351	0
Qatar	974	0
Romania	40	0
Russian Federation	7	8 - wait for dial tone - 10
Saint Kitts and Nevis	1	11
Saudi Arabia	966	0
Serbia	381	0
Sierra Leone	232	0
Singapore	65	001, 008
Slovakia	421	0
Somalia	252	0
South Africa	27	0
South Korea	82	001, 002
Spain	34	0
Sri Lanka	94	0

Sweden	46	0
Switzerland	41	0
Syria	963	0
Taiwan	886	2
Thailand	66	1
Thuraya Satellite	882 16	0
Trinidad and Tobago	1	11
Tunisia	216	0
Turkey	90	0
Uganda	256	0
Ukraine	380	0
United Arab Emirates	971	0
United Kingdom	44	0
United States of America	1	11
U.S. Virgin Islands	1	11
Uruguay	598	0
Uzbekistan	998	8 - wait for dial tone - 10
Venezuela	58	0
Vietnam	84	0
Yemen	967	0
Zimbabwe	263	0